

# iStarUSA

*iStar, Good Start!*

How to install R2U power supply in 3U chassis?


R2U content




BTC-2U/3U-R2U



1. Install the rear bracket on R2U housing

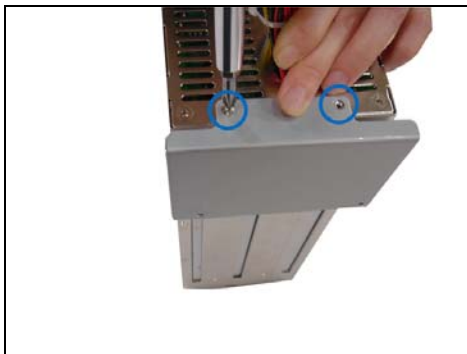

2. Replace the power supply brackets

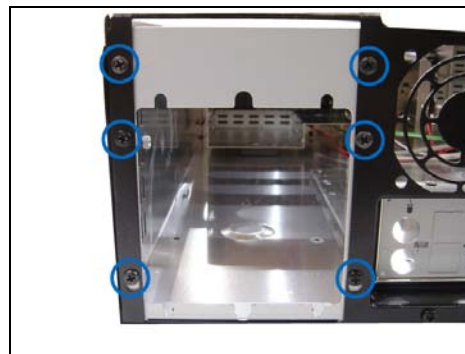

2. Secure the power supply on both side of chassis

